



# Samsung Galaxy Tab 4 7.0 Speaker Replacement

The speaker may have taken a blow if the tablet was dropped. If so, it can be replaced through the instructions of this guide.

Written By: Aubrey Goodwin



## INTRODUCTION

The speaker replacement is relatively easy. It is attached to the back panel and does not require any attention with the motherboard.

---



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Back Panel



- Starting from any corner of the tablet, carefully insert the plastic pry tool into the gap between the chrome frame and black back panel.
- Now slide the pry tool around the tablet to release the plastic locking clips.



## Step 2

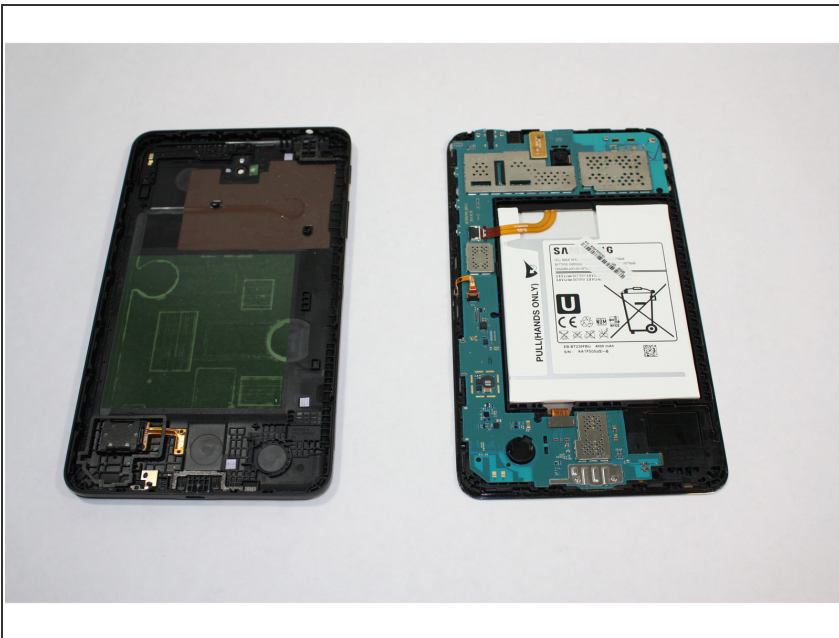

- Carefully separate the rear case from the front panel assembly .
- At this point, you will be able to complete any component replacements necessary.




## Step 3 — Speaker

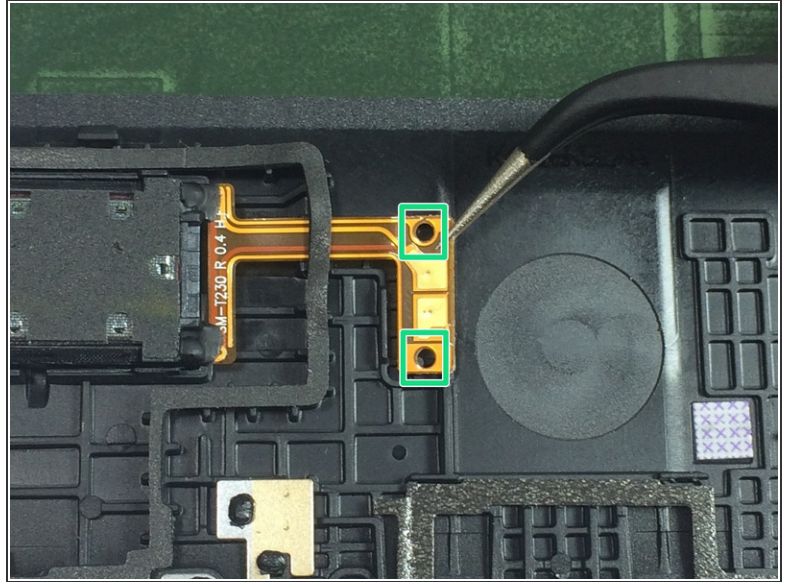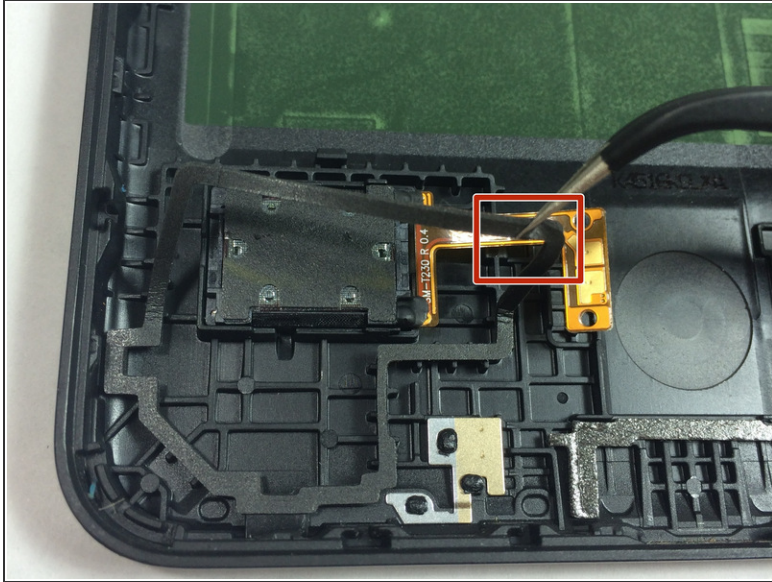

- In order to make the speaker connection, you must first peel back part of the surrounding water gasket.
- With the tweezers, grab the overhanging corner and peel the gasket back slowly.
- If you look closely, you will see the two slots indicated. Use the tweezers to lift this portion of the connection away from these slots.

## Step 4

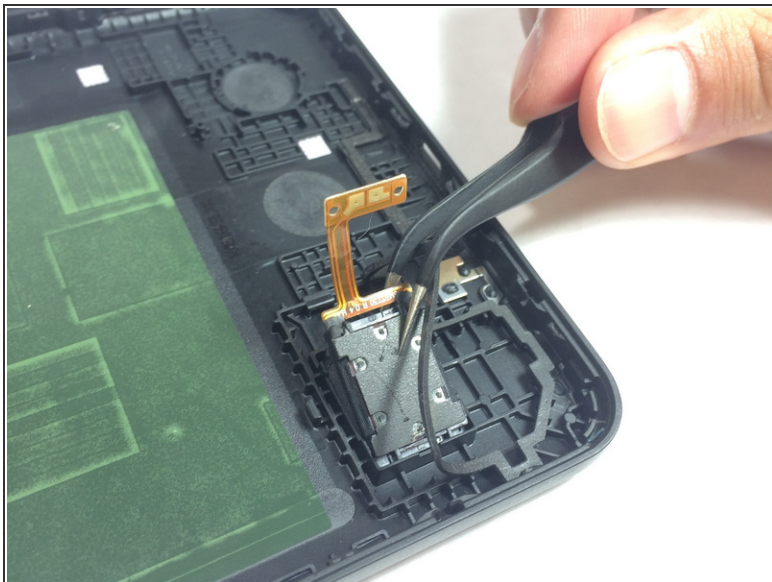

- Now you should be able to lift the speaker out of its small fitting with the tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 09:55:09 PM.